



(815) 725-1226

Restroom Partition Guide

Mounting Styles

Depending on the material selection, toilet partitions are available in the following mounting styles:



Ultimate Privacy

You don't need to build private rooms to achieve Ultimate Privacy™. Doors and panels up to 72" high plus our No Sight system — continuous stop and hinge side filler that eliminates sightlines into the compartment — guarantee privacy.



Floor Anchored / Overhead Braced

Clean lines, modern appearance, and solidly braced for new construction or modernization independent of floor condition. The unique pilaster construction combines with anti-grip headrail bracing for structural rigidity. Can be used with light weight concrete or wood floors.



Ceiling Hung

Open design at the floor means easy access for better maintenance and reduced operating cost. Goes hand-in-hand with wall-hung fixtures for full floor accessibility. Proper installation requires attachment to structural ceiling support.



Floor Anchored

Perfect for low-ceiling washrooms. Sleek line across top of partitions adds a modern accent. Design and construction ensures easy installation. For concrete floors only, this style requires 2" minimum penetration into floor. Junior Height sizes are available.



Floor & Ceiling Anchored

This construction style is extremely stable and durable and is recommended for busy washrooms where abusive treatment is prevalent and vandal resistance is critical. Requires concrete floor and structural ceiling supports.

Materials

Absolute Supply offers the greatest variety of materials for toilet partitions.




Powder Coated Steel

High-tech quality at an economical price. Thermoset hybrid powder finish on galvanized steel is highly resistant to corrosion, grease, acids, caustics, marks and stains. A broad range of [contemporary colors](#) to complement any interior.




Stainless Steel

Gleaming beauty indefinitely. The elegance of stainless steel complements any design scheme. Incorporates the known corrosion resistant benefits of type 304 stainless steel. Easily maintained, even scratches can be buffed out. [Satin or textured finish.](#)

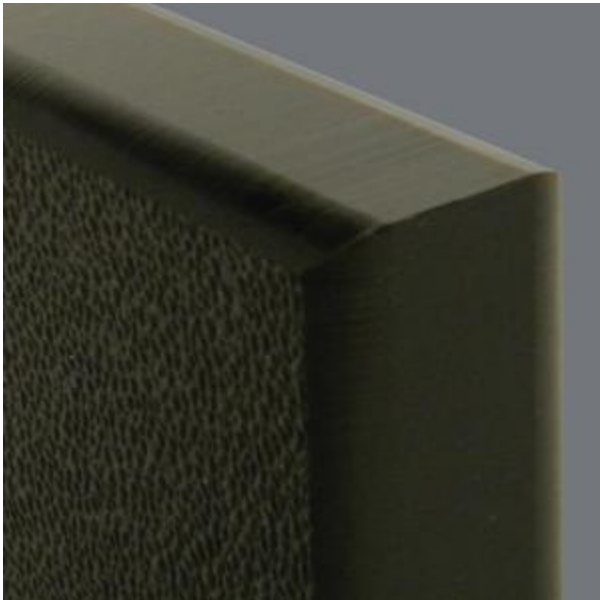


Solid Plastic (HDPE)

Ideal choice for busy public facilities and high humidity applications - never needs painting and will not easily dent, rust or delaminate. Available in a wide variety of [colors](#).

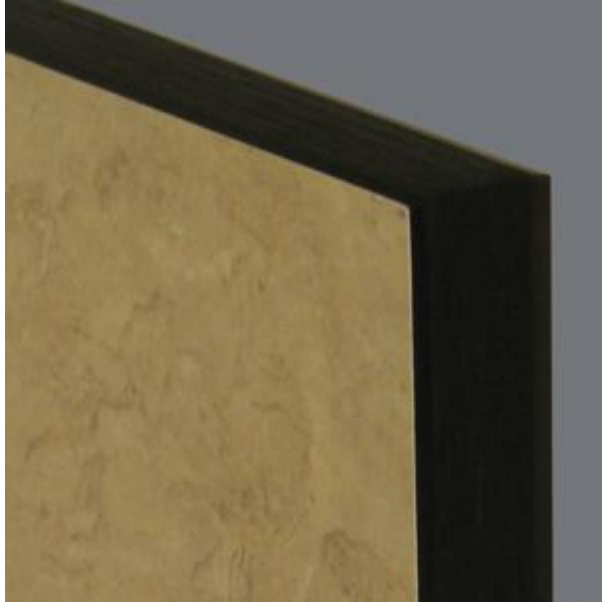


Phenolic Black-core

Holds up even under severe moisture conditions from showers, pools and saunas, or when maintenance includes hosing down toilet partitions. Ideal for where vandalism is a problem. In a [full color spectrum](#) — all with black edges.

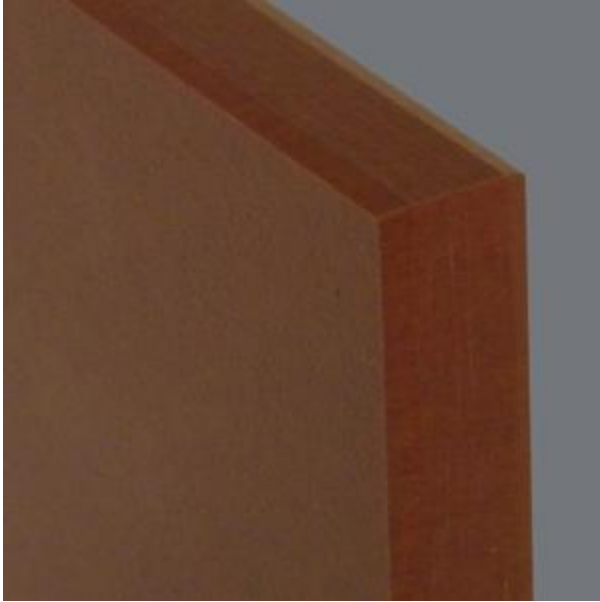

Phenolic Color-thru

Lives up to its name, with surface color through and through. This product is impact, scratch and graffiti resistant. It also has excellent screw-holding power and all the advantages of traditional Phenolic performance. Available in [attractive colors](#).

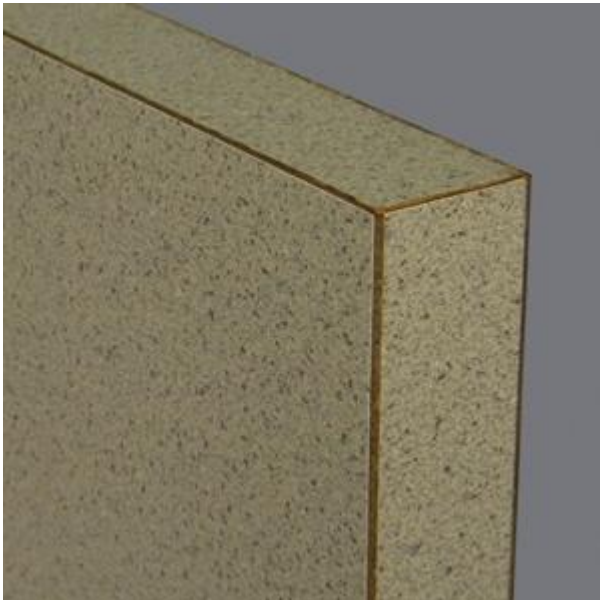

Plastic Laminate

Combining design flexibility, aesthetic appeal and economy in an ideal finish — the proven benefits of high pressure laminates are built in — featuring a smooth surface highly resistant to scratches, grease and mars. Offered in a complement of [designer colors](#).